

SEC-C Module Overview

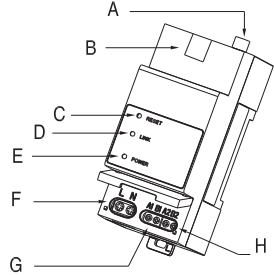


Fig 1: eSolar SEC-C definition

Code	Name
A	External Wi-Fi antenna
B	LAN
C	RESET
D	LINK*1 (LED INDICATOR)
E	POWER*2 (LED INDICATOR)
F	Power input
G	RS485 for inverter
H	RS485 for Smart meter

Table 1: Interface description

Note: *1 Green light slow blinking indicates Ethernet is connected to server, fast blinking indicates firmware is upgrading. Blue light slow blinking indicates WIFI is connected to server, fast blinking indicates Bluetooth is connected.

*2 LED indicator keeps ON indicating power is working properly, while LED indicator turning OFF indicates power supply is abnormal.

Monitoring APP Connection

1) Download eSAJ Home APP

For iOS system, search "eSAJ Home" in App Store to download.

For Android system, search "eSAJ Home" in Google Play to download.

2) Bluetooth connection

① Turn on mobile phone Bluetooth connection.

② Open eSAJ Home APP → Select "Tool" → "Remote Configuration" → Select "Bluetooth" → "Next STEP" → Search devices → Click on the Bluetooth name of the eSolar SEC-C.


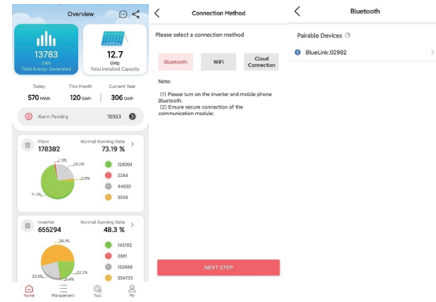


Fig 2 Bluetooth connection

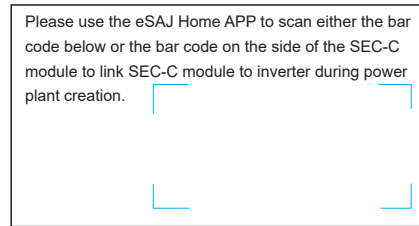

Parallel System Solution

Introduction:

Inverter parallel allows you to expand your power plant capacity and combine all the inverters to act as a single system to power the loads together. It is allowed to connect up to 10 inverters parallelly in the same system.

Total plant capacity:

The total power plant capacity can be reached up to 23KW, the size of CTs used should be determined by the maximum power plant capacity.

RS485 cable splitter:

The RS485 cable splitter enables you to increase the RS485 network connection on a RS485 port. The RS485 cables wiring is as figure 4 below, connect two RS485 cables from two different inverter to a single RS485 port.




Fig 3: Ethernet cable splitter



Fig 4: Ethernet cable splitter and cable connection

eSAJ Home APP Connection:

NOTE:In the networking state, the RS485 and 4G/WIFI interfaces of the inverter cannot be used at the same time.

1. Power on the inverters.
2. Set the inverter RS485 addresses to be different from each other. (Set the RS485 address to any number between 1 and 10, nonrepeat.), through the 4G/WIFI interface of the machine connected to a WiFi-2 or AIO3 module or 4G module to modify.

● For R5/ R6 series inverter: Set the address on the eSAJ Home APP.

Install a communication module onto the inverter, and connect to eSAJ Home APP.

Procedure: Communication > RS485 setting > Address. After the RS485 address setting completed, disconnect the communication module.

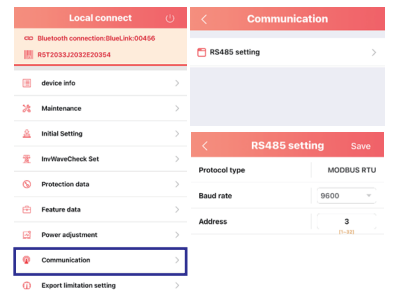


Fig 5: APP display for choosing RS485 address

3. Connect the RS485 cables and SEC-C module (as the parallel system wiring diagram).

4. Connect SEC-C module to eSAJ Home APP.

Then you should see all the devices list connected parallelly.


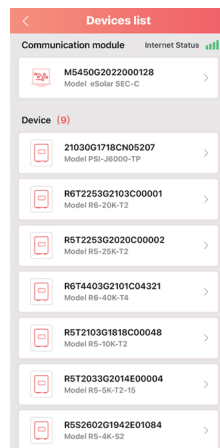


Fig 6: APP display for devices list

Parallel System Wiring:

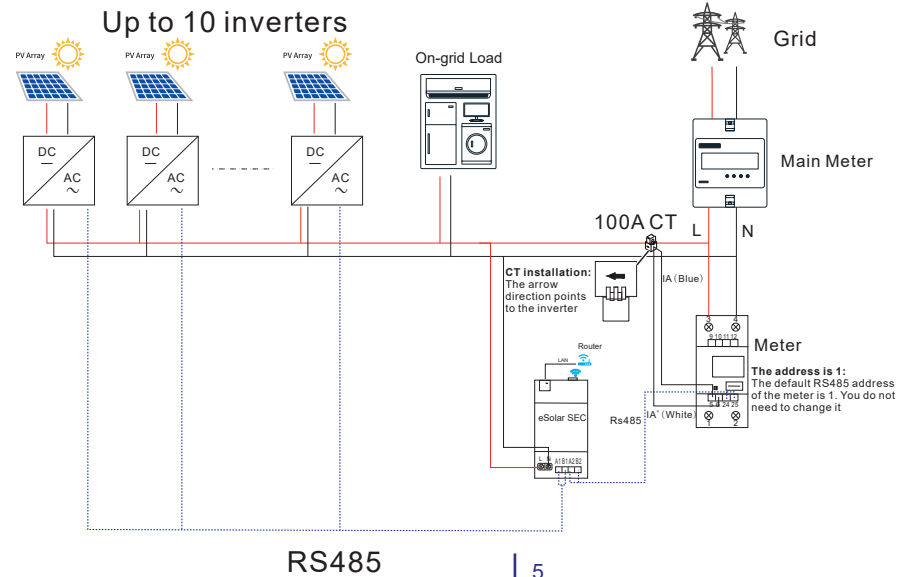


Export Limit Setting

Open eSAJ Home App, and connect all the devices to App.

1. Enter eSolar SEC-C interface.

2. Select the gear icon at the top-right corner.

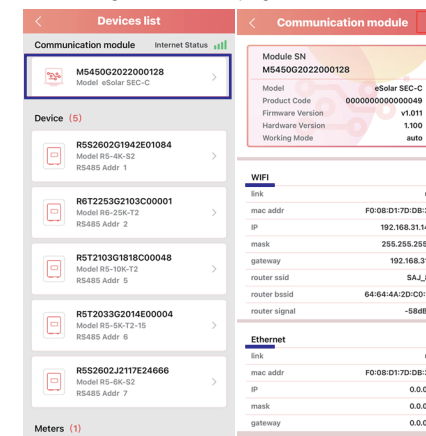

3. Select Export limitation setting.

4. Enter the export limit value.

5. click on "Save".

